

HOLOSUN®

DAS ZIEL IST DAS ZIEL



ANLEITUNG | MANUAL

WICHTIGER HINWEIS ZUR ABSCHALTAUTOMATIK

*IMPORTANT NOTICE ON
AUTOMATIC SHUT OFF*




⊙ EINSTELLUNG ABSCHALTAUTOMATIK

1. Bitte beachten Sie, dass Ihr Visier nach 10 Minuten ohne Bewegung **automatisch in den Schlafmodus** wechselt.
2. Der **automatisch eingestellte Schlafmodus** kann manuell überschrieben werden und lässt sich in vier Stufen von 0 bis 12 Stunden einstellen (Stufen: nach 10 Minuten, nach 1 Stunde, nach 12 Stunden, 0=nie).
3. **Einstellung manueller Schlafmodus**
 - 3a Halten Sie die Taste "+" für 10 Sekunden gedrückt, um den **Zeiteinstellungsmodus** aufzurufen. Das Absehen beginnt zu blinken. Die Anzahl der Blinkzeichen steht für die gewählte Stufe. Ein Blinken entspricht einer Zeitverzögerung von z. B. 10 Minuten.
 - 3b Drücken Sie die Taste "+", um die **Ruhezeit** einzustellen. Durch ein- oder mehrmaliges Drücken von "+" oder "-" wird die Zeit für jede Betätigung um eine Stufe erhöht bzw. verringert. Das Absehen blinkt jedes Mal 1x zur Bestätigung, wenn "+" oder "-" gedrückt wurde. Wenn die Zeitverzögerung für die Ruhezeit auf "0" eingestellt ist, ist die Funktion deaktiviert.
 - 3c Um die **Einstellung zu bestätigen** und den Zeiteinstellungsmodus wieder zu verlassen, drücken Sie gleichzeitig die Tasten "+" und "-".



⦿ AUTOMATIC SHUT OFF OPERATION

1. Please note that your sight will **automatically enter sleep mode** after 10 minutes of no movement.
2. The **sleep time delay** can be adjusted from 0 to 12 hours in four steps (steps: sleep after 10 min, after 1 hour, after 12 hours, 0=never).
3. **Sleep time delay**
 - 3a Press the "+" button for 10 seconds to enter **time adjustment mode**. The LED will blink. The number of blinks represents the chosen step. One blink for example represents 10 min of time delay.
 - 3b Press the "+" or "-" button to set the **time delay**. Pressing "+" or "-" one or more times will increase or decrease the time delay by one step for each press. The LED will blink once to confirm each time a button is pressed. If the sleep time delay is set on "0", the features is disabled.
 - 3c Then press the "+" and "-" button simultaneously to **confirm the new setting** and exit the time adjustment mode.

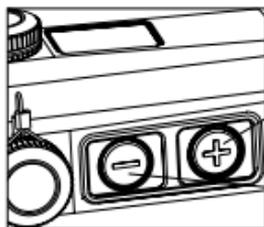

"+" Taste zur manuellen Einstellung

"+" button for manual adjustment

"-" Taste zur manuellen Einstellung

"-" button for manual adjustment



GENERAL DISTRIBUTOR

LASERLUCHS GMBH

Rudolf-Diesel-Str. 2a
D-56070 Koblenz
Germany

Fon +49 (0)261-983497-80
Fax + 49 (0)261-983497-88
info@holosun.eu
www.holosun.eu